



# BONNET GUARD INSTALLATION INSTRUCTIONS FOR: VW AMAROK 2009

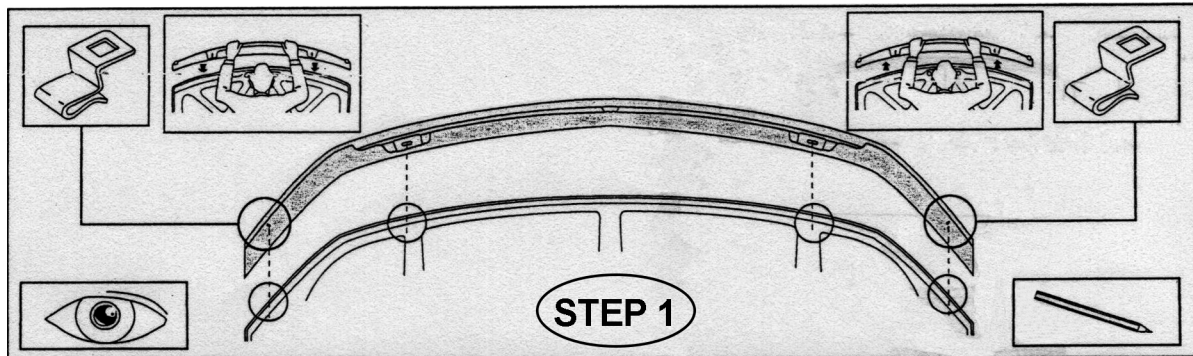


Wash the bonnet with a mild soap and solution, then dry thoroughly. Open the bonnet. Trial fit the Bonnet Protector centrally onto bonnet. With a non-permanent marker, note and mark the positions of the holes in the Bonnet Protector onto bonnet. Also note the metal wing clips. Remove Bonnet Protector.

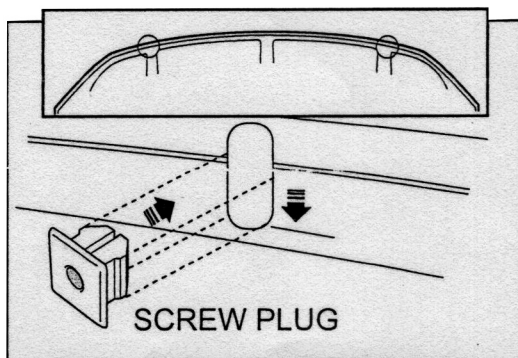


## STEP 2

Fit the screw plugs into the square slots of the bonnet. Slide the screw plugs to the bottom of the square slots.

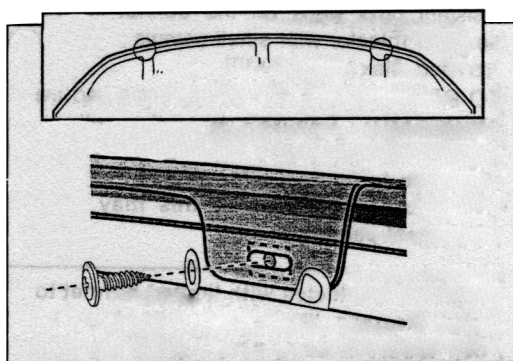

## STEP 3

Re-install the Bonnet Protector While maintaining thumb pressure against the underside of the Bonnet Protector insert washer and self-tapping screw into screw plug and tighten screw. Do not fully tighten yet. Ensure the Bonnet Protector is centralised on bonnet then fully tighten screws.

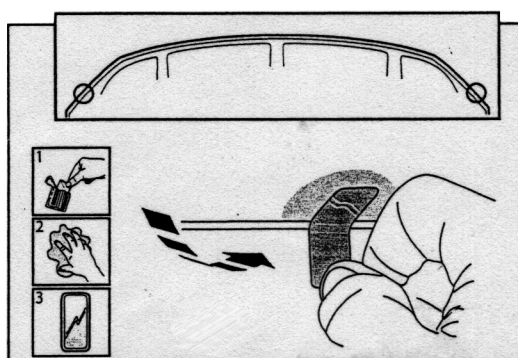


## STEP 4

Clean the noted areas with the alcohol wipe provided. Wipe off any residue with a dry clean cloth. Adhere the abrasive resistant tape strip over the bonnet lip. Apply tape so approximately half of each strip is adhered to the top side and half is adhered to the underside of bonnet.

# BONNET GUARD


## INSTALLATION INSTRUCTIONS

### FOR: VW AMAROK 2009

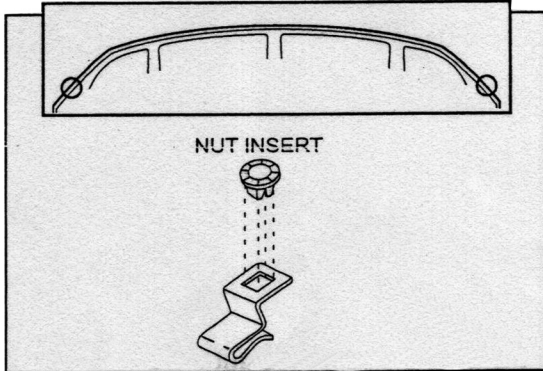

#### STEP 5

Fit the inserts into the square slots of the metal wing clips.

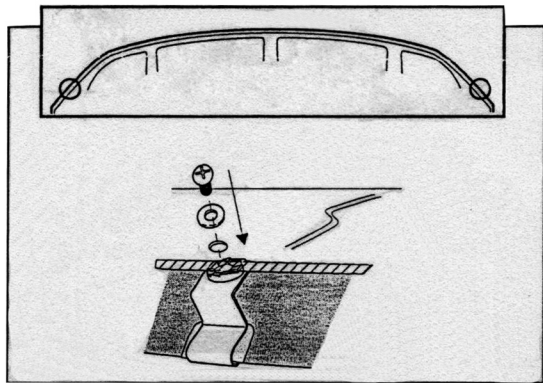

#### STEP 6

Locate the metal wing clips over the abrasive resistant tape strips on the bonnet lip. Fasten Bonnet Protector with small screws and washers provided. Max torque 0.5Nm  
**TO REMOVE:** Reverse above procedure.  
**IMPORTANT:** Ensure that the clips are positioned over abrasive resistant tape and do not come in contact with any of the bonnet's paint work. Failure to do this may result in permanent paint damage.




**NOTE:** On vehicles with limited bonnet to grille clearance it may be necessary to adjust bonnet bump stops. (Refer to workshop manual)



Do not use automatic car wash.



Clean Bonnet Protector with a mild detergent and water solution.

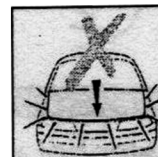

Do not slam bonnet.



Do not use abrasive cleaners