

NUDGE BAR BRACKET FOR TOYOTA PRADO 150 SERIES





Before Installation

- Please read this instruction before installation. Please pay attention to the surface of your car, improper installation may scratch it.
- All the pictures shown here are for your reference only and they may not match to the actual object, but the installation method is the same.



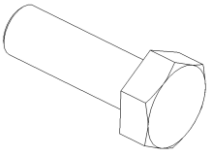


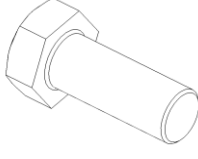






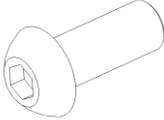


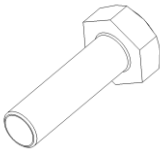
Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.



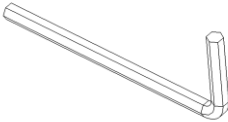
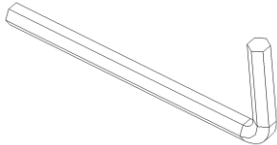
Parts List

NO.	QTY	PIC	NO.	QTY	PIC
①	1		②	1	
		bracket (L)			bracket (R)
③	1		④	1	
		Support bracket (L)			Support bracket (R)

INSTALLATION INSTRUCTIONS

⑤	2		⑥	1	
		License bracket 1			License bracket 2
⑦	4		⑧	4	
		Hex bolt (full thread) M10_30			Large washer D10
⑨	4		⑩	2	
		Spring washer D10			Hex bolt (full thread) (fin thread) M12x1.25_30
⑪	2		⑫	2	
		Spring washer D12			Large washer & Spring washer D8
⑬	2		⑭	2	
		Flat washer D12			Hex nut M8
⑮	2		⑯	2	
		PVC block φ8			T-bolt M8_35
⑰	4		⑱	4	
		Hexagon socket screws round head M8_20			Flat washer D8
⑲	4		⑳	4	
		Hex nut M8			Hex bolt (full thread) M6_20

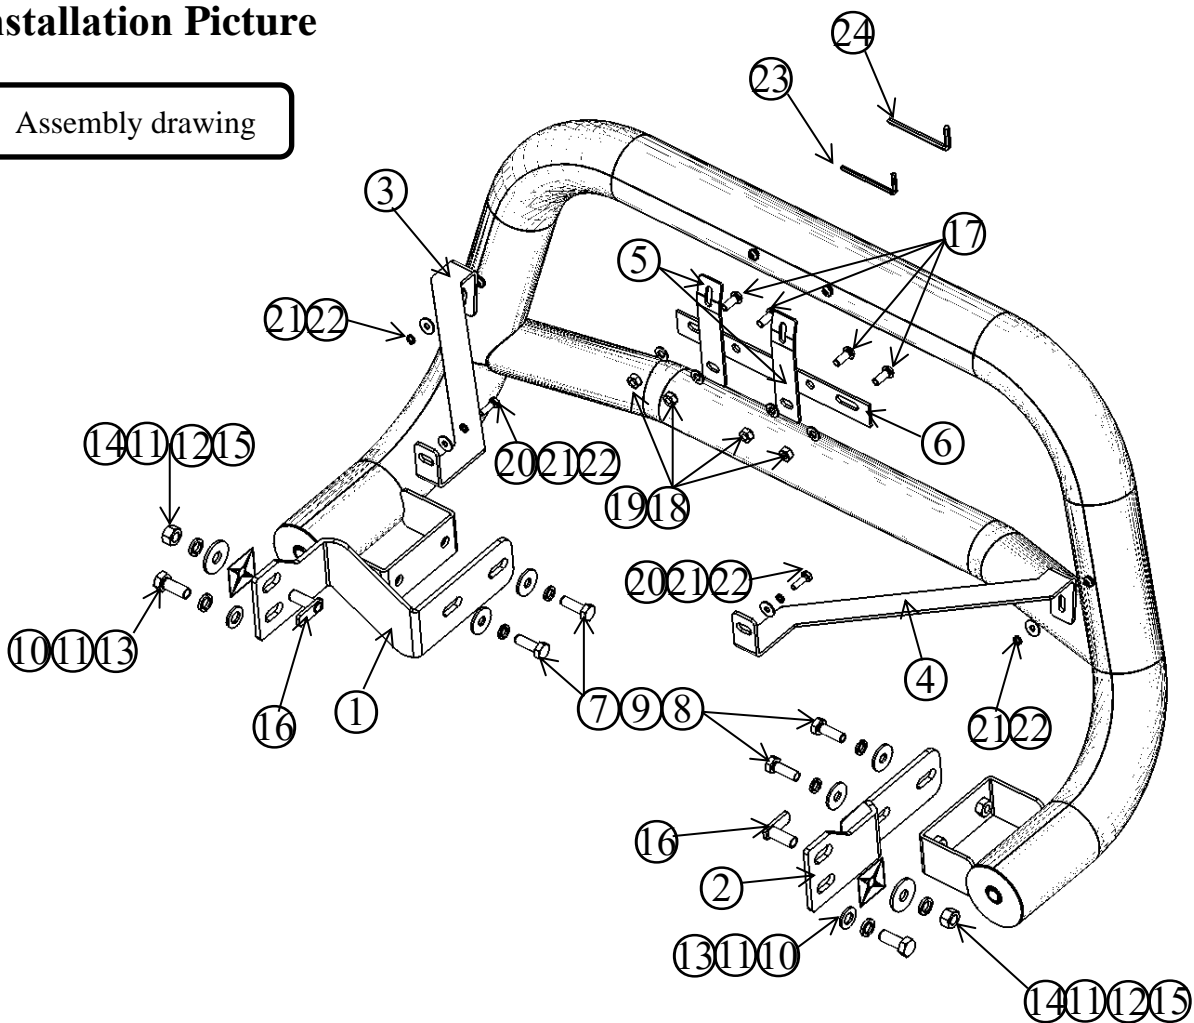
INSTALLATION INSTRUCTIONS

21	4	 Spring washer D6	22	6	 Large washer D6
23	1	 hex wrench S=4	24	1	 hex wrench S=5

Installation Steps

Installation Picture

Assembly drawing

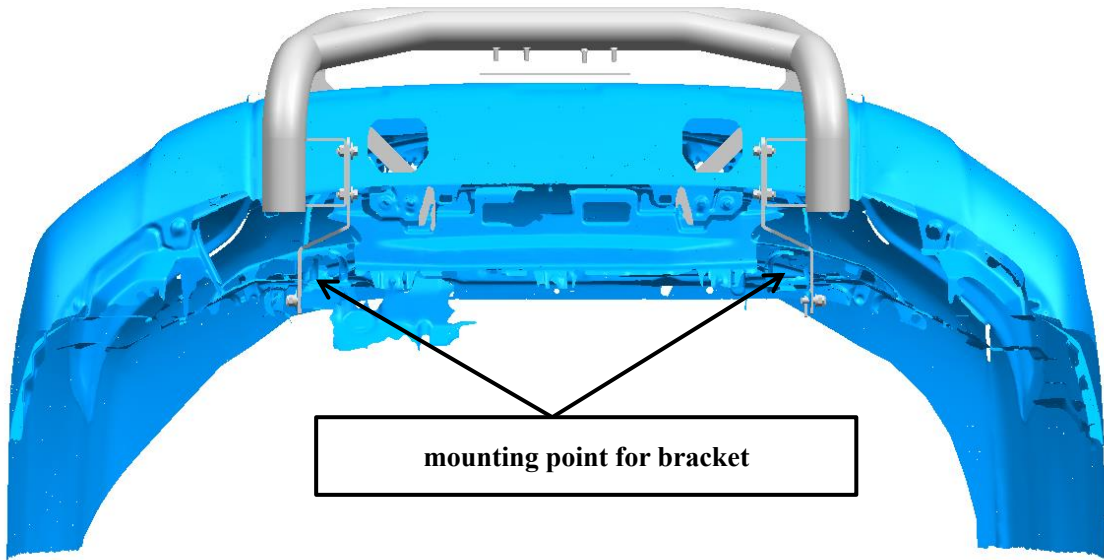


Step 1.: refer to the part list, check whether the accessories from the list are complete

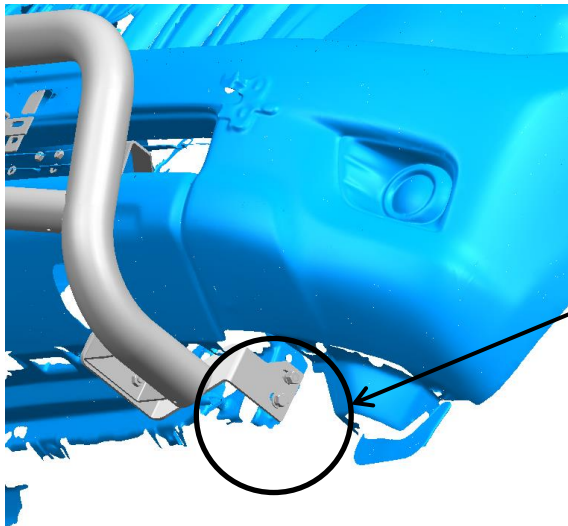
NOTE: 1. Bracket (L) & 2. Bracket (R) have been altered to accommodate newer model Prado – with elongated holes.

NOTE: 3. Support Bracket (L) & 4. Support Bracket (R) are now a 2x piece design for adjustability to suit newer model Prado – Use supplied silver (17,18,19) M8 Hexagon bolts, washers and nuts.

INSTALLATION INSTRUCTIONS

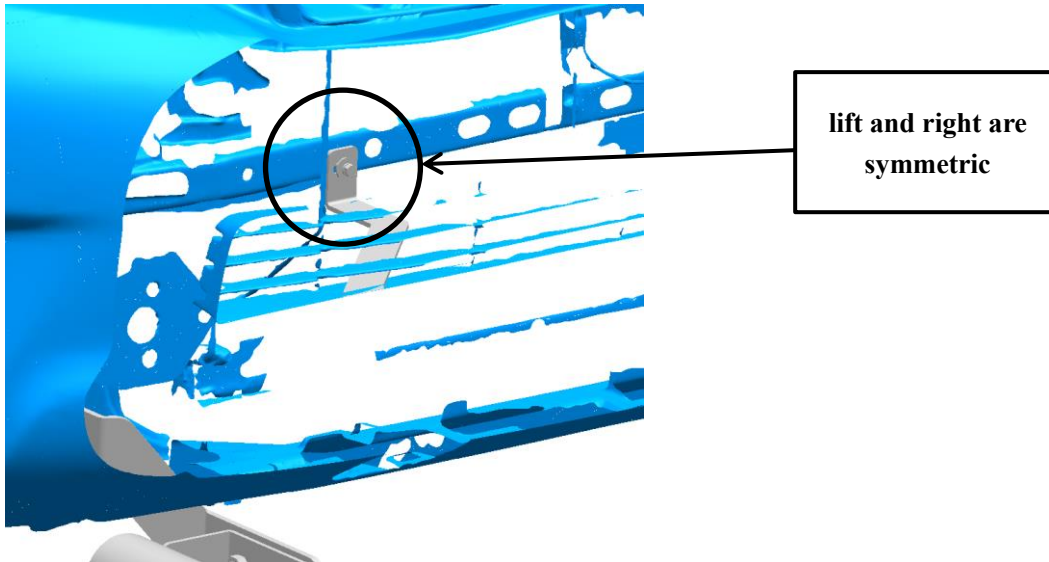
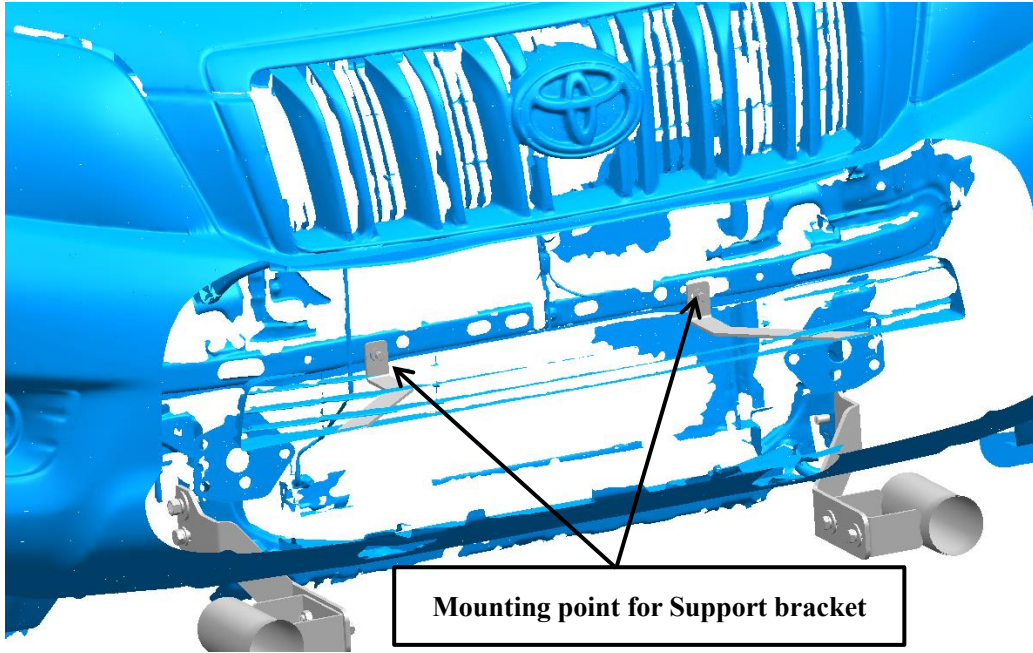


mounting point for bracket



**mounting point
for bracket, lift
and right are
symmetric**

INSTALLATION INSTRUCTIONS



Step 2: as picture show, find out those mounting point.

Step 3: firstly install the license bracket on the grille guard then assemble it on the vehicle without tighten the hardware.

Step4: assemble the grille guard with the bracket, then assemble it with the support bracket, adjust the position and tighten the hardware.

Step5: assemble the license plate on the license bracket 2

INSTALLATION INSTRUCTIONS



Step6: clear up the tooling and complete the installation

NOTE

Any damages and losses caused by improper installation and application are beyond our quality warranty.