












## INSTALLATION INSTRUCTIONS FOR:NISSAN NAVARA NP300 2014

NO	Item Description	Quantity	Image	Service Part Number	Service Kit Quantity
1	Bonnet Protector	1			
2	Fixed Clip (For*Clean*Bonnet Protector only)	4		F5169-4KE0AAU	4
3	Fixed Clip (For*Smoked*Bonnet Protector only)	4		F5169-4KE0AAU	4
4	Wing Clip (For*Clean Bonnet Protector only)	2		F5169-4KE0AAU	2
5	Wing Clip (For*Smoked*Bonnet Protector only)	2		F5169-4KE0AAU	2
6	Screw Plug	4		F5169-4KE0AAU	4
7	Screw	4		F5169-4KE0AAU	4
8	Washer	4		F5169-4KE0AAU	4
9	Abrasive Resistant Tape	8		F5169-4KE0AAU	8
10	Long Abrasive Resistant Tape	1		F5169-4KE0AAU	1
11	Alcohol wipe	2		F5169-4KE0AAU	2

### Tools Required

No.2 Phillips Head Screwdriver	Scissors	
Non-permanent marker		

### General Notes

Read through the fitting instruction before installation of accessory.  
 Always install the accessory following the fitting instructions. Failure to do so may cause damage to the vehicle or te accessory.  
 Ensure all recyclable discarded vehicle/accessory components and packaging are recycled following local recycling regulations.  
 It is always recommended that this accessory is fitted by a qualified Nissan Technician.  
 Safely store and protect any removed vehicle components.  
 Remove all metal swarf and dust from all vehicle surfaces if surface is used for accessory installation.  
 Ensure all fasteners are torqued to the specifications as per FI if applicable.


### Safety Notes

Check that all work practices comply with safety standards.  
 Appropriate clothing & PPE must be worn  
 While using power tools or safety equipment, ensure safe procedures are followed.

# BONNET GUARD


## INSTALLATION INSTRUCTIONS

### FOR:NISSAN NAVARA NP300 2014

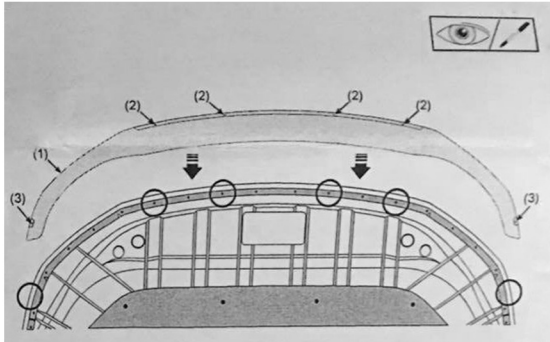


#### STEP 1

Trial fit the Bonnet Protector(1)centrally onto bonnet. With a non-permanent marker,note the positions of the four inner slots in the bonnet protector(2)that correspond to the scrivets in the underside of the bonnet.Also note and mark where the two outer slot positions(3) correspond with the Bonnet Protector. Remove Bonnet Protector.

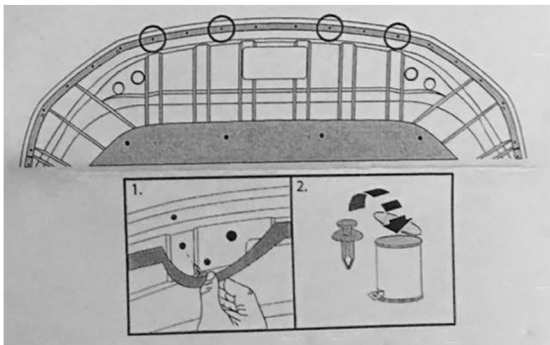


#### STEP 2

Remove the four scrivets from the rubber trim at the noted locations. Discard scrivets.

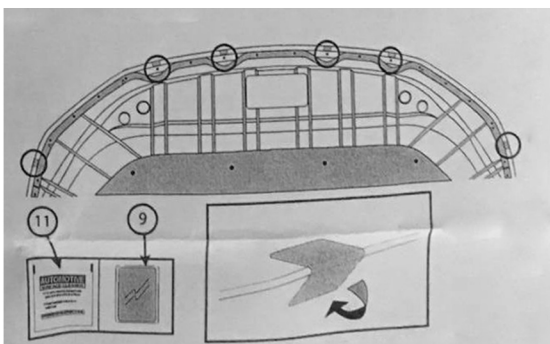

#### STEP 3

Clean the noted areas under the metal clip locations with the alcohol wipe provided.Allow to dry. Adhere the abrasive resostant tape strips over the bonnet lip.Apply the tape so that approximately half of each strip is on the top surface of the bonnet and half is on the underside.

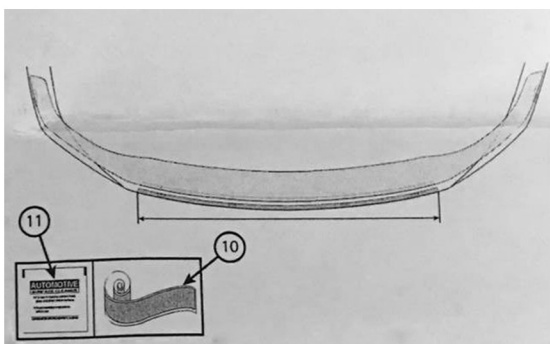


#### STEP 4

Sit the Bonnet Protector back from the front lip of the Bonnet. Clean the area of the bonnet that corresponds to the centre acrylic tag with the alcohol wipe provided. Allow to dry. Adhere the long abrasive resistant tape strip flush with the front edge of the bonnet. Trim of excess tape.

# **BONNET GUARD**


## **INSTALLATION INSTRUCTIONS**

### **FOR:NISSAN NAVARA NP300 2014**

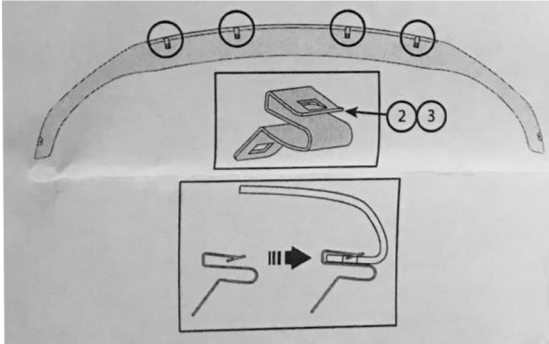


#### **STEP 5**

Push the four fixed clips to the centre acrylic tag of the Bonnet Protector. A definite click should be heard when the acrylic tag engages with the metal clip.

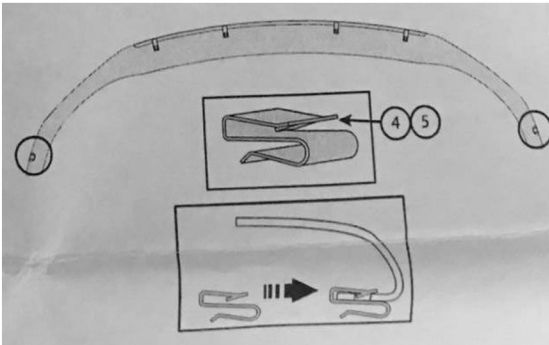


#### **STEP 6**

Push the two wing clips onto the acrylic wing tags of the Bonnet Protector. A definite click should be heard when the acrylic tag engages with the metal clip.

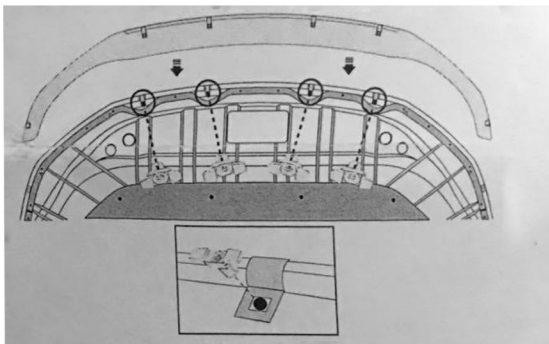

#### **STEP 7**

Re-install the Bonnet Protector(1). Ensure the Bonnet Protector is centrally located on the bonnet. Ensure the metal clips are over the abrasion resistant tape and do not come into direct contact with the Bonnet. Insert the screw plugs through the square hole of the fixed clips into the bonnet(2). Ensure the square screw plug head is recessed into the square hole in the clip.

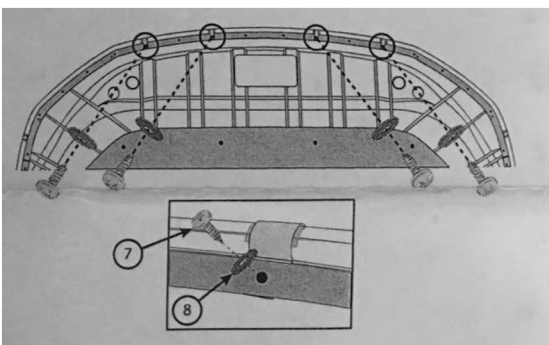


#### **STEP 8**

Re-position the rubber trim over the fixed clips. Insert the self-taping screws through the washers and the rubber trim into the screw plugs and fasten.

# **BONNET GUARD**


## **INSTALLATION INSTRUCTIONS**

### **FOR:NISSAN NAVARA NP300 2014**

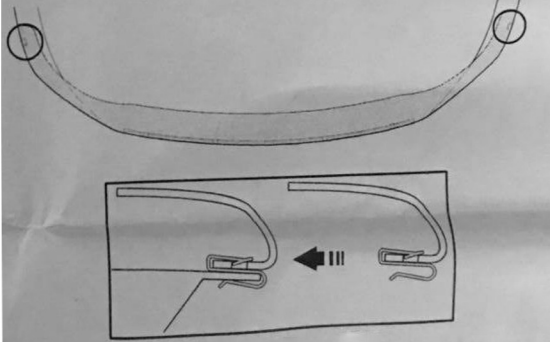


#### **STEP 9**

Slide the metal clips onto the bonnet lip over the previously adhered abrasive resistant tape strips. Ensure the metal clips are over the abrasion resistant tape and do not come into direct contact with the Bonnet.

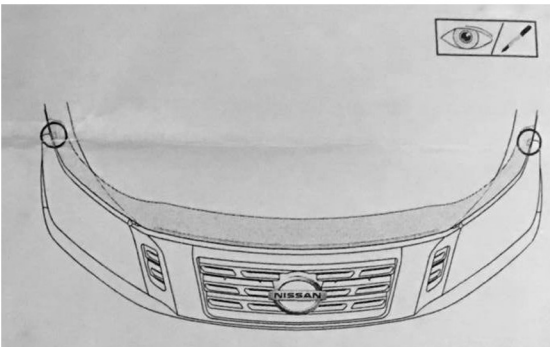

#### **STEP 10**

Lower the Bonnet.  
With a non-permanent marker,note the positions of the two wing clips on the bonnet protector and where they correspond to the headlights.  
Open the bonnet.

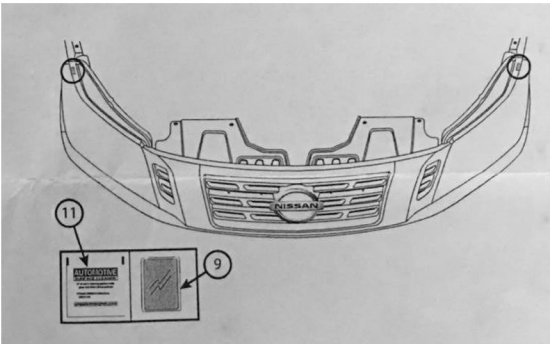

#### **STEP 11**

Clean the noted areas on the headlights at the wing clip locations with the alcohol wipe provided.Allow to dry.  
Adhere the abrasive resistant tape strips to the top surface of the headlights.