INSTALLATION INSTRUCTIONS

Black Nudge Bar with Skid Plate Suitable for Toyota Fortuner 2015-2018

Before Installation

- Please read the instructions completely and carefully
- The figures here are for reference only and may have differences with the actual product you
 receive, however they share the same method of assembly.



Care and Cleaning

- Mild soap may be used to clean the product.
- Please periodically check and retighten all hardware to ensure maximum life and durability.

Parts list

NO.	QTY	PICTUER	NO.	QTY	PICTUER
1	1		2	1	
		BRACKET (L)			BRACKET (R)
3	5	SUPPORTING BRACKET (L)	4	10	SUPPORTING BRACKET (R)


Page 1 of 4

INSTALLATION INSTRUCTIONS									
5	4	HEX BOLT M12*35	6	4	SPRING WASHER D12				
7	4	LARGE WASHER D12	8	4	HEX BOLT M10*30				
9	4	SPRING WASHER D10	10	4	LARGE WASHER D10				
11)	2	T-NUT M8	12	2	HEX BOLT M8*25				
13	2	SPRING WASHER D8	14)	2	LARGE WASHER D8				
15)	2	HEX BOLT M6*20	16	2	SPRING WASHER D6				
17	2	LARGE WASHER D6							

INSTALLATION INSTRUCTIONS


Installation Steps

INSTALLING PICTURE

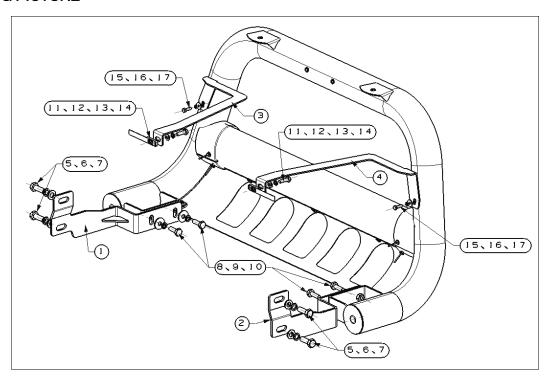


Step 1: Find threaded holes on the chassis under the vehicle as shown in following pictures, and install L&R brackets with (567), do not totally tighten at this step.



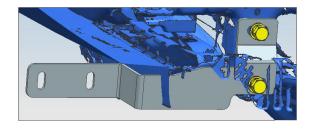

Step 2: Find mounting holes located at the air-inlet grille as shown in following picture, install L&R supporting brackets with (11)(12)(13)(14), do not totally tighten first.

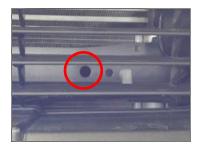



Step 3: Connect the grille guard to the brackets with (890), and to supporting brackets with (150), do not tighten first.

Step 4: Adjust the bar in the most proper position, then tighten all of the bolts, finish the installation.

Page 3 of 4

NOTE Any damage or loss caused by improper installation and application, goes beyond our quality warranty.